


## Manual for the 10 slide viewer:

### Changing the slides:

- Remove the 5 bolts at the top of the housing and remove the plate with 6 holes.

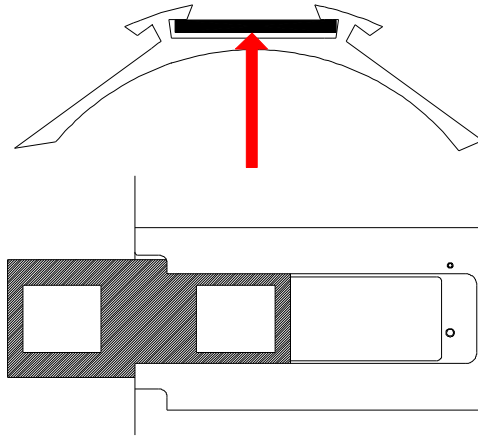

- Remove at the left side of the viewer the small plate with the ventilation holes.
- For inserting slides, push with the slide on the spring tip to be able to shift the slide in the slot.
- Push the slide in the slot until it is blocked at the right side of the drum.
- Push the slide inside out of the drum, to get the slide into fixed focus position (see red arrow).

### Changing the lamp bulb:

- Remove at the left side of the viewer the small plate with the ventilation holes.
- Take out the lamp and exchange it for another one. With a minimum of switching the lamp on-off it will last for about half a year until replacement.

### Maintenance:

- The mechanical part of the viewer does, with normal use, not require any after adjustments or lubrication of moving parts.
- There are two parts which can be adjusted, and is recommended not to do this;
- The block with bearings that is mounted with 4 bolts at the right side of the viewer house can be shifted to the front or the back to adjust the fixed focus point.
- The drum stop positioning, mounted with 3 bolts at the back of the viewer housing can be moved up and down to adjust the height alignment of the slide with regards to the lenses.
- The lenses (glass parts) can be exchanged by taking a screw ring away from the back of the lens. These lens elements can be ordered at our company. Don't try to unscrew the total lens tube, it is glued to the front plate.
- Clean the lenses with a soft cloth. Don't use any caustic liquid to clean them, it could damage to the coating of the lens.
- Do not blow with compressed air in the viewer, it causes dust to get between the lens elements or at the back surface of the lens. It is hard to clean this.