



- SW1: up- lamp turn-off delay active
down- lamp always on
- SW2: up- front button passes signal to external device.
down- front button directly controls viewer
- SW3: up- after lamp turns off, nothing happens
down- after lamp turns off, drum goes to slide N° 1
- SW4: up- amplifier turned off
down- amplifier turned on

Lamp turn-off delay

Line-in

Viewer control interface

external switch box

Fuse

Line-in cable at the CD-ROM is connected to the ear-plug or rear connector but NOT the sound-card.

Internal CD-ROM in PC

Dutch English German French Spanish

Language selection box

Main power supply
The viewer is preset to a certain Voltage, check this before plugging it to a wall socket