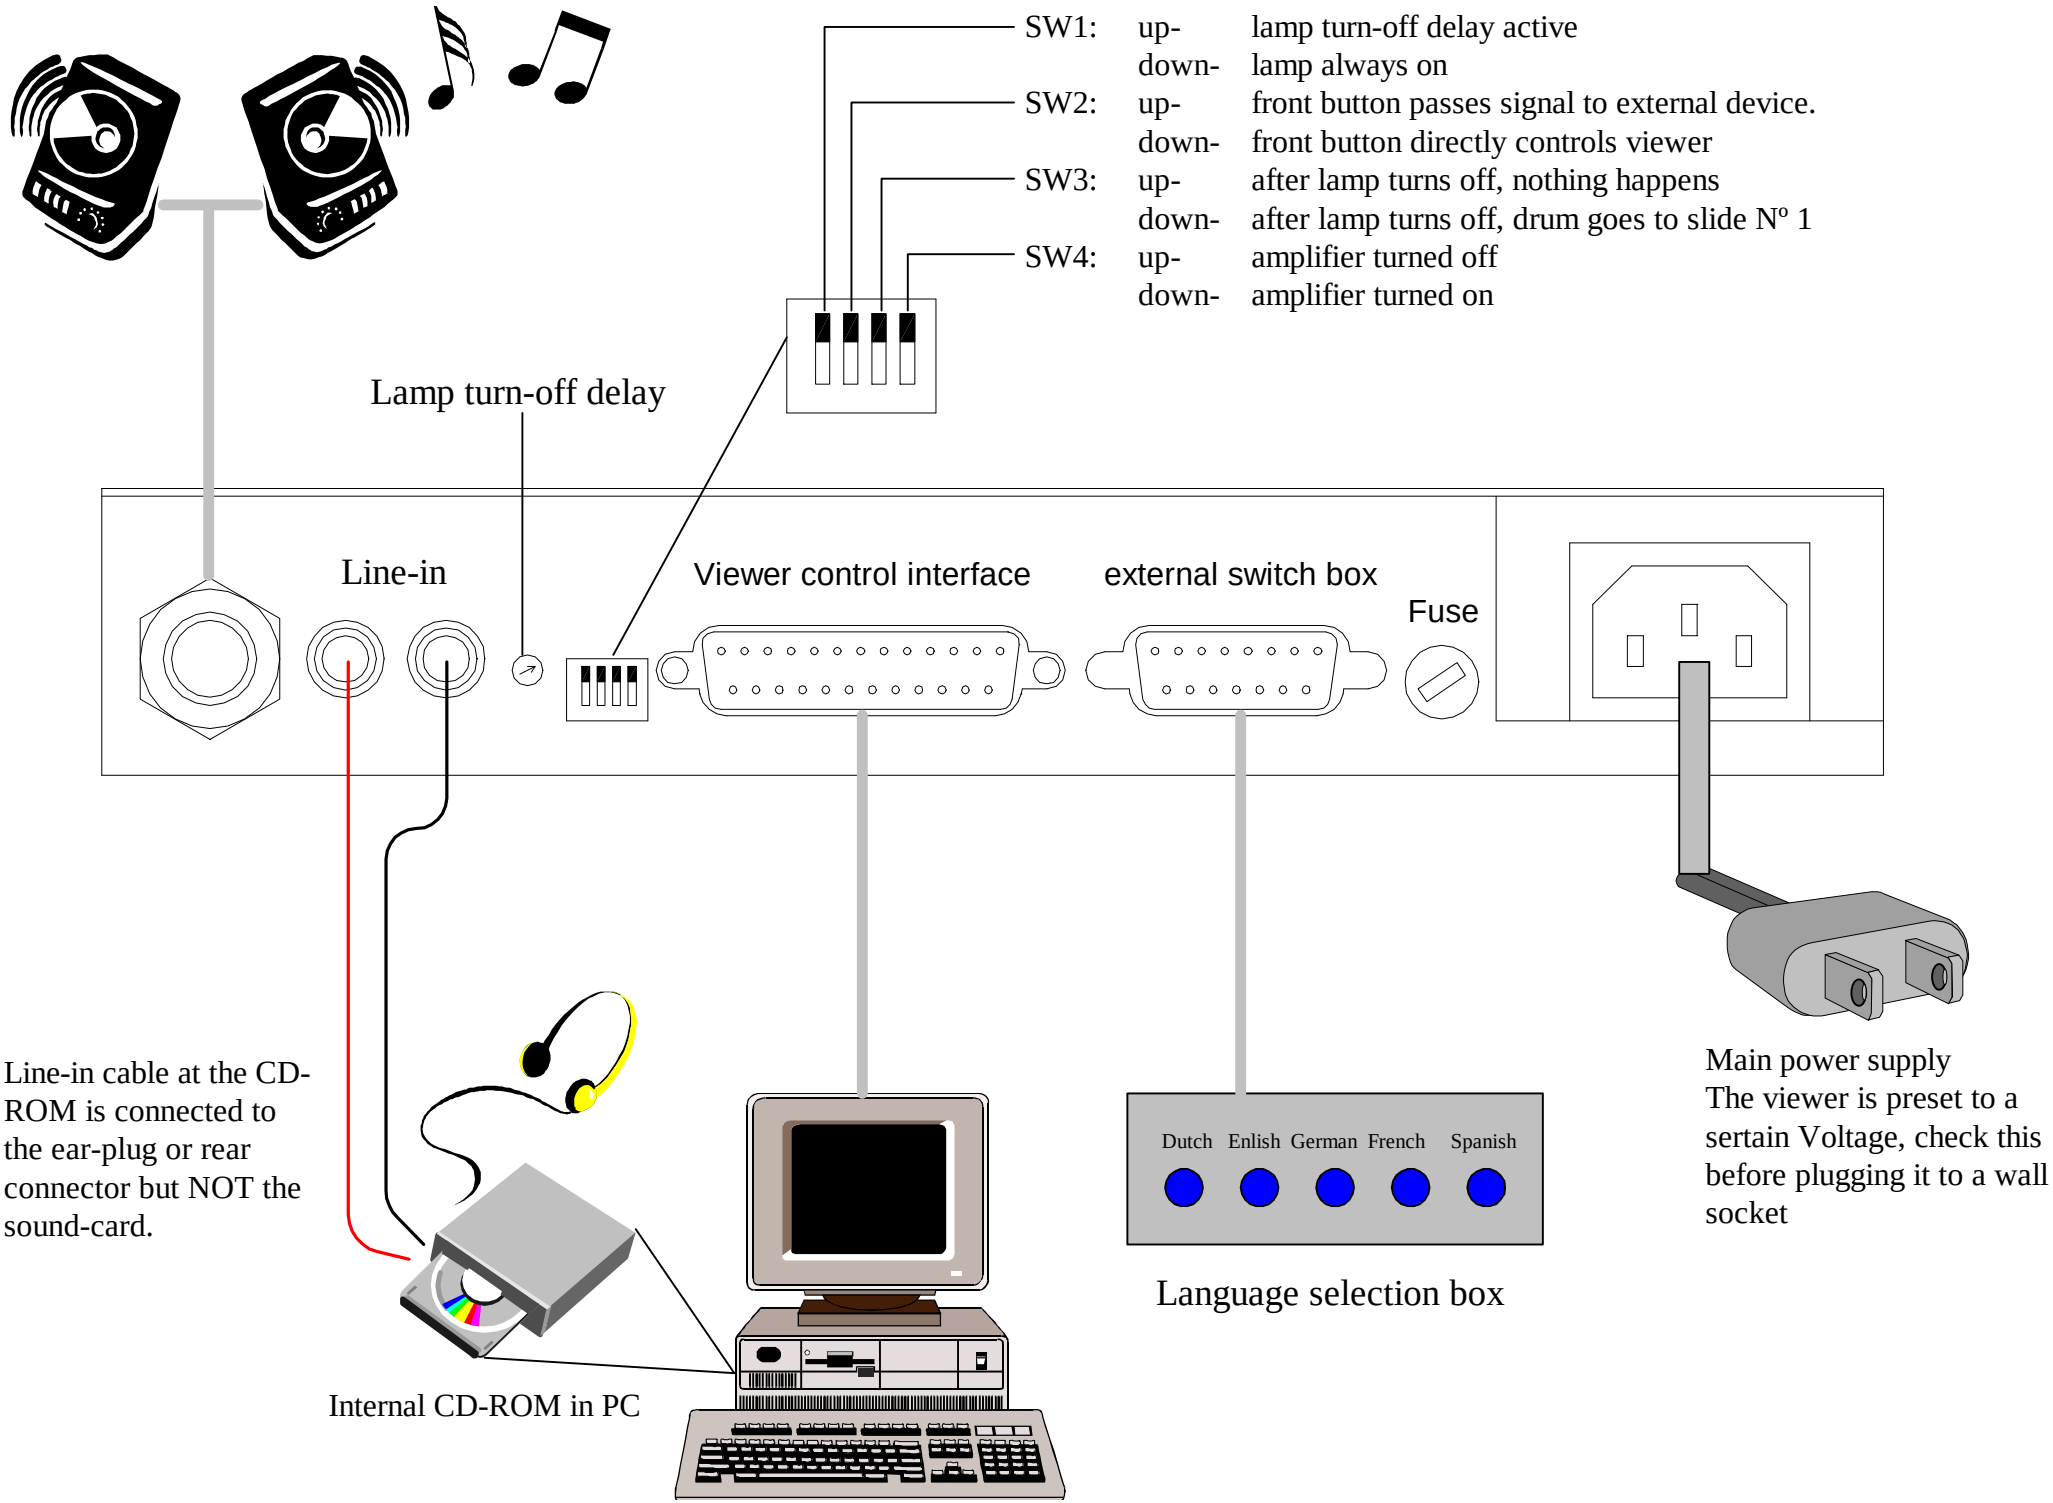

SW1: up- lamp turn-off delay active
down- lamp always on
SW2: up- front button passes signal to external device.
down- front button directly controls viewer
SW3: up- after lamp turns off, nothing happens
down- after lamp turns off, drum goes to slide Nº 1
SW4: up- amplifier turned off
down- amplifier turned on
Lamp turn-off delay
Line-in
Viewer control interface
external switch box
Fuse
Line-in cable at the CD-ROM is connected to the ear-plug or rear connector but NOT the sound-card.
Internal CD-ROM in PC
Dutch Enlish German French Spanish
Language selection box
Main power supply
The viewer is preset to a sertain Voltage, check this before plugging it to a wall socket